

Gentner VRC-2000 Remote Control Code Summary

Codes	Voice Interface Modes & Codes	
DTMF	Operator Mode Functions	User Mode Functions
000	Report Alarms	Report Alarms
010	Clear Alarm	Clear Alarms
020*	N/A	Modem OFF
020#	N/A	Modem ON
030*	N/A	Disable Alarm Reporting
030#	N/A	Enable Alarm Reporting
050*	Sound Sensor OFF	Sound Sensor OFF
050#	Sound Sensor ON	Sound Sensor ON
060	Real Time Clock	Real Time CLock
201* thru 216*	N/A	Command Channel Switch A
201# thru 216#	N/A	Command Channel Switch B
501# thru 504#	Sequence Output	Sequence Output
601* thru 616*	Metering Channel Report, Single	Metering Channel Report, Single
601# thru 616#	Metering Channel Report, Multiple	Metering Channel Report, Multiple
701* thru 716*	Status Channel Report, Single	Status Channel Report, Single
701# thru 716#	Status Channel Report, Multiple	Status Channel Report, Multiple
910	N/A	Remote Setup/ User Mode Toggle
920	N/A	Local Setup/ User Mode Toggle
999	Good-Bye (Remote Mode Only)	Good-Bye (Remote Mode Only)

Codes	Voice Interface Mode & Codes
DTMF	Setup Mode Functions
020*	Disable Autologging
020#	Enable/Program Autologging
060	Real Time Clock/Calendar
070	Telephone Interface
080	System Identifier
090	Access Codes
101*	Disable Outbound Telephone Numbers
105*	
101#	Enable/Program Outbound Telephone Numbers
105#	
201 thru 216	Command Channels
301* thru 364*	Disable Time of Day Functions
301# thru 364#	Enable/Program Time of Day Functions
401* thru 440*	Disable Mute Functions
301# thru 364#	Enable/Program Time of Day Functions
501 thru 504	Sequence Output Programs
601 thru 616	Metering Channels
701 thru 716	Status Channels
910	Remote Setup/User Mode Toggle
920	Local Setup/User Mode Toggle
930	Voice OFF
940	Voice ON